


ROBERT'S


TWO-CYLINDER VIDEO LIBRARY and CARBURETOR REPAIR

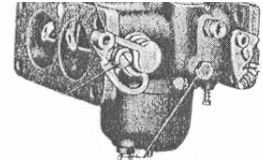

DUPLEX CARBURETOR DRILLING INSTRUCTIONS

After removing the balls that seal the idle passages, you need to drill the primary and secondary passages with a #40 six inch clean out drill bit as shown in the diagram. The idle passage #1 will be up through the bottom two passages. The secondary passage #2 will be through the front of the carburetor. The drill bit can be purchased from Robert's Carburetor Repair. The part number is #71001408.

To learn more about rebuilding Duplex Carburetors you can also purchase the video "How to Rebuild Duplex Series Carburetors" from Robert's Carburetor Repair.

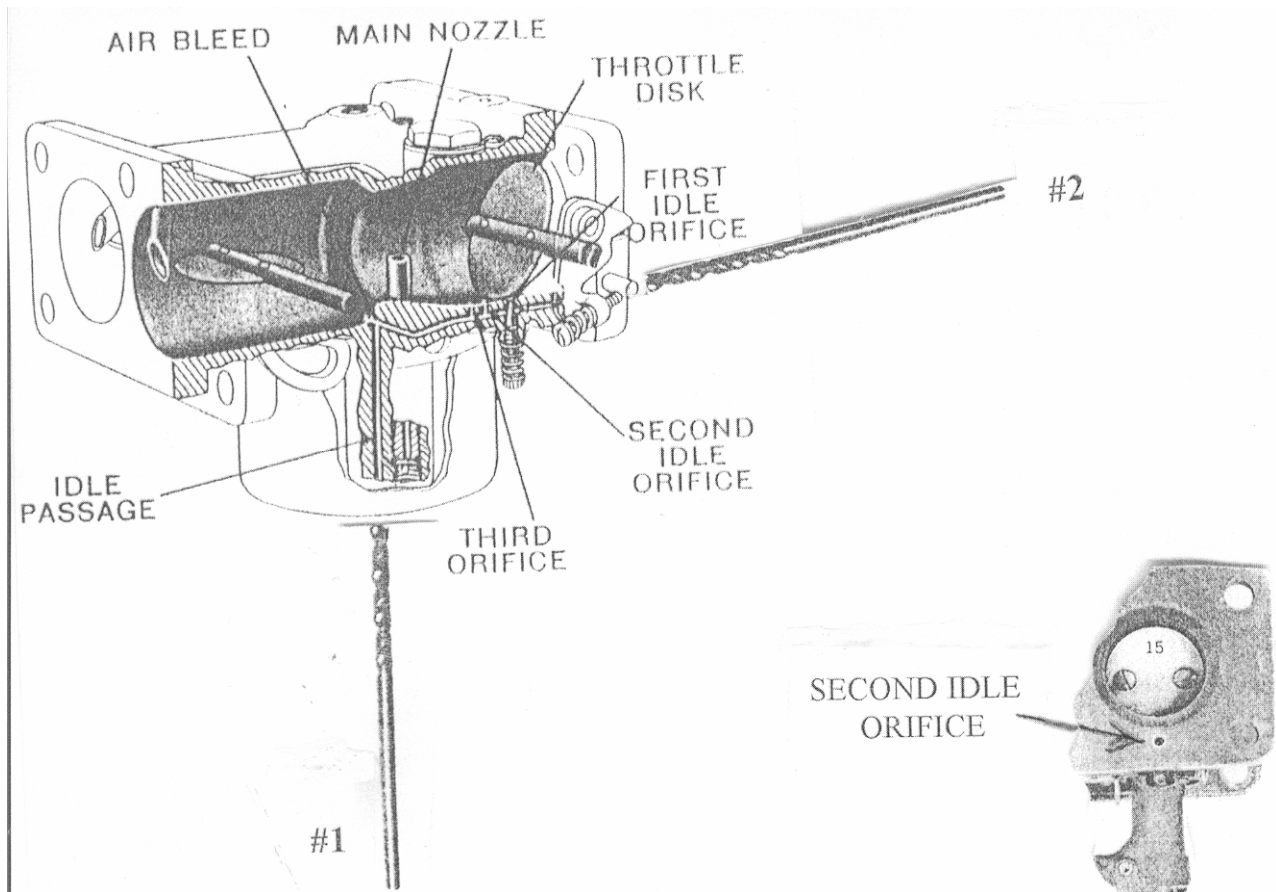

Robert's Carburetor Repair
404 East 5th Street, PO Box 624 Spencer, Iowa 51301
Phone: 712-262-5311 Fax: 712-264-0914
email address: rbeaver@robertscarbrepair.com
website: www.robertscarbrepair.com